



## CHROMEBOOKS: Reset Chrome Browser


Click the ellipsis (3 dots) in the upper right to access the **Settings**

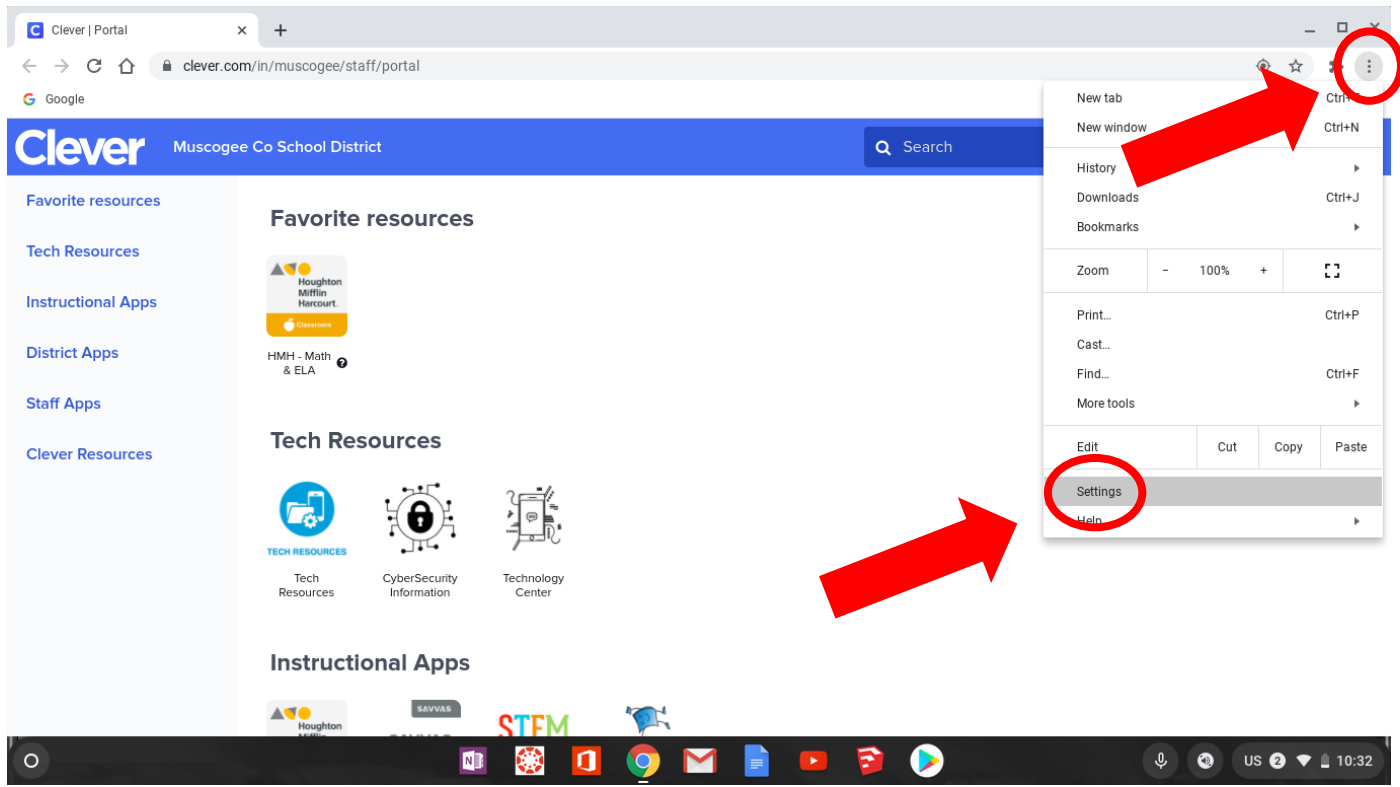

Scroll down to the bottom to select **Advanced**

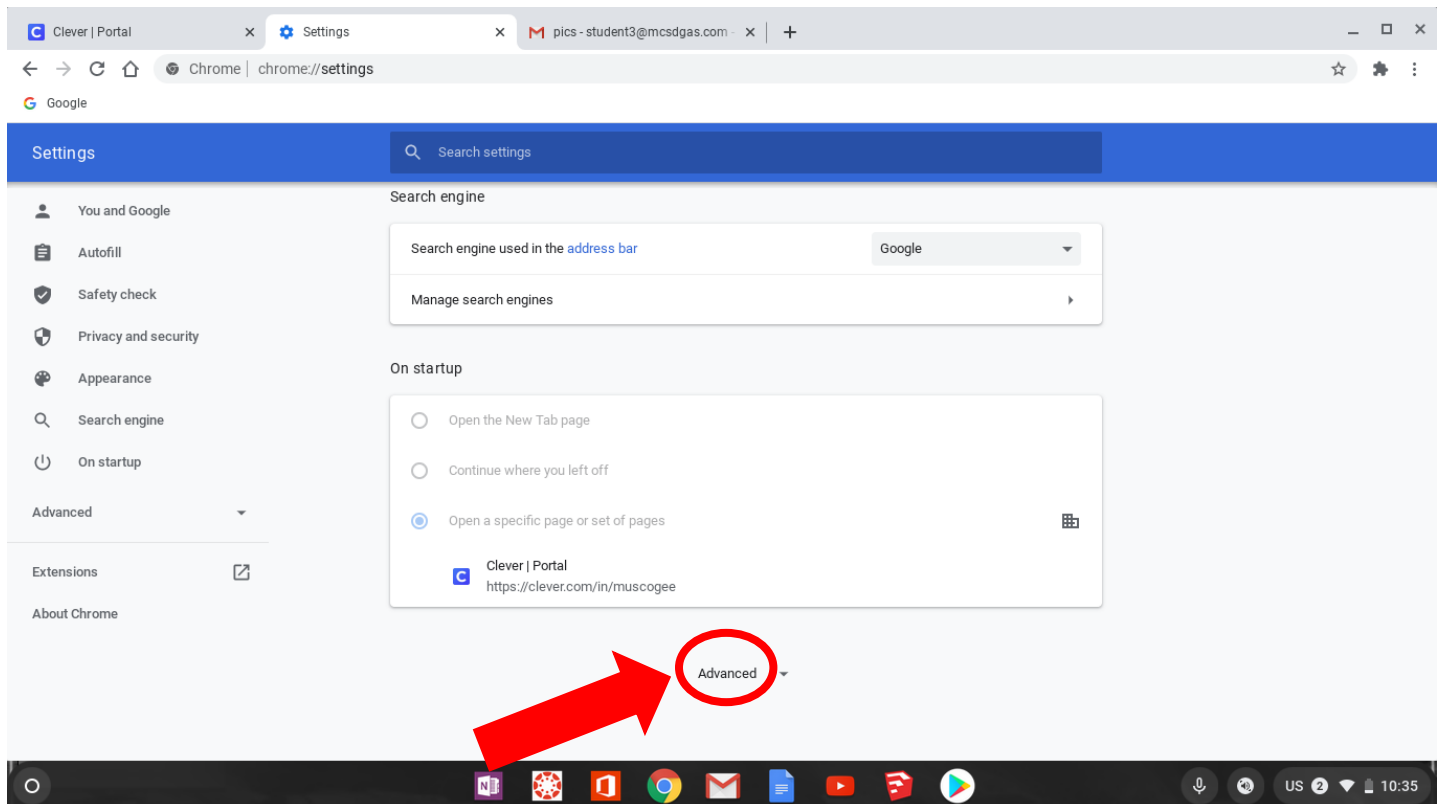

## Scroll down to Reset settings

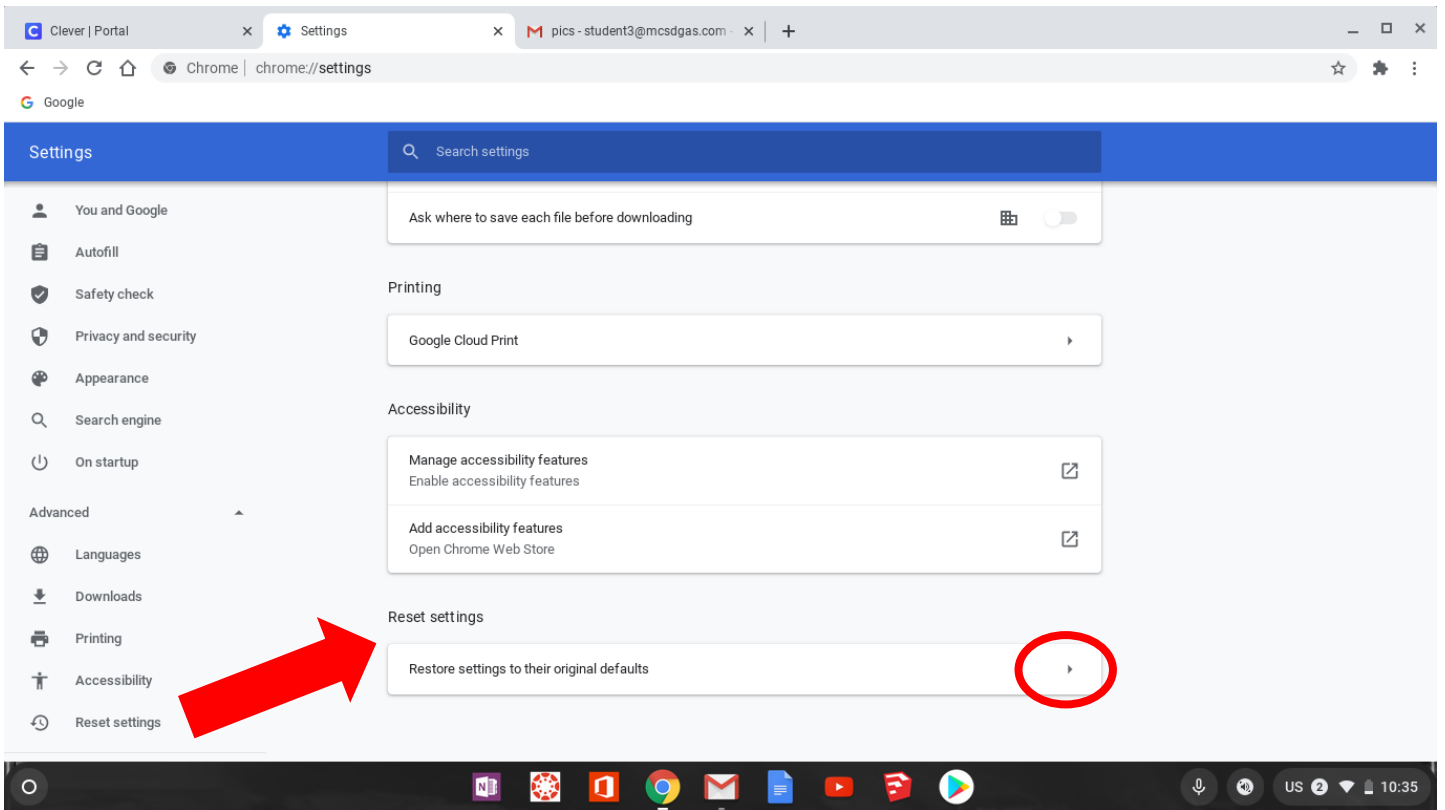

## Click the button to Reset settings

